

3M

**DBI
SALA**

Fall Protection

3M™ DBI-SALA® Comfort Grip Connector

**Snap into
work mode.**

Distributed by :

SHEIDA

Hard work doesn't have to be a pain.



Protect your hands and connect easier with the 3M™ DBI-SALA® Comfort Grip Connector.

- Versatile, breakthrough design
- Keeps your fingers out of the way, allowing the gate to be completely open
- Provides freedom at height
- Designed to self-align

Strong at Height

5,000 lb. tensile strength

3,600 lb. gate strength


3,600 lb. transverse strength

Can help save lives when loaded transversely.

In the event of a fall, the hand-guard pin will shear to allow the connector to align with the direction of the fall and remain securely anchored.

It's up to any job.

Designed for workers who need to anchor efficiently and comfortably in multiple orientations.

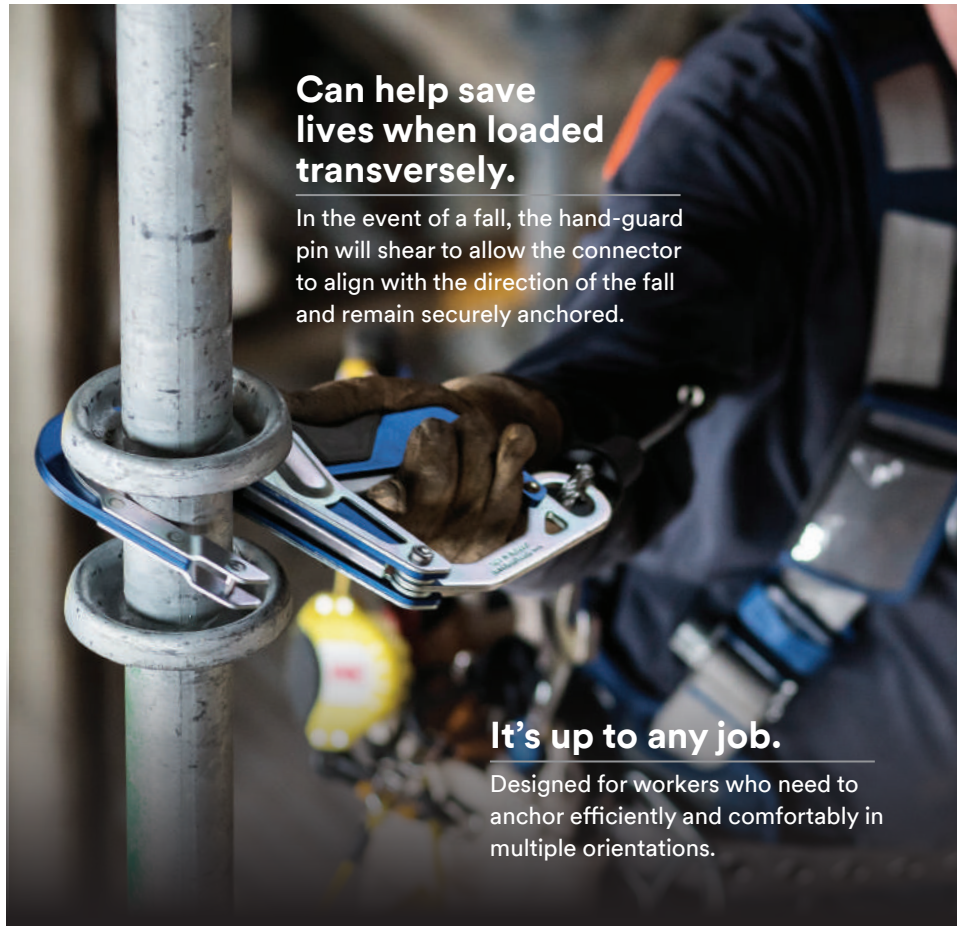

Use the 3M™ DBI-SALA® Comfort Grip Connector with your favorite lanyard or personal SRL.

Available on some of our most popular products including:

1246410

3M™ DBI-SALA® EZ-Stop™ Lanyard



1246416

3M™ DBI-SALA® ShockWave™2 Lanyard



3101663

3M™ DBI-SALA® Nano-Lok™ Personal SRL



3500257

3M™ DBI-SALA® Nano-Lok™ Edge Personal SRL



3M™ DBI-SALA® Comfort Grip Connector Product Specifications

Features	Comfort Grip
Standards	ANSI Z359.12 CSA Z259.12 EN 362:2004
Side load requirement	Yes
Compatible with most scaffold rosettes	Yes
Materials	Aircraft grade aluminum Alloy steel Nylon Stainless steel
Tensile strength	5,000 lbs.
Gate strength	3,600 lbs.
Transverse strength	3,600 lbs.
Gate opening	2.25 in. (5.7 cm)

3M.com/FallProtection

Distributor By:



SHEIDA INTERNATIONAL CO LLC
Safety Products & Services

P.O. Box 120, PC 114
Muscat, Sultanate of Oman
Tel: +968 92803889
Email: info@sheidainternational.com
Web: www.sheidainternational.com



3M Fall Protection
Personal Safety Division
3833 SALA Way
Red Wing, MN 55066 USA

Phone 800-328-6146
Email 3mfallprotection@mmm.com
Web 3M.com/FallProtection

3M, DBI-SALA, EZ-Stop, ShockWave and Nano-Lok are trademarks of 3M Company.
© 3M 2017. All rights reserved.